


# PowerView™ Motorisation

by LUXAFLEX® WINDOW FASHIONS

SCENE CONTROL GUIDE





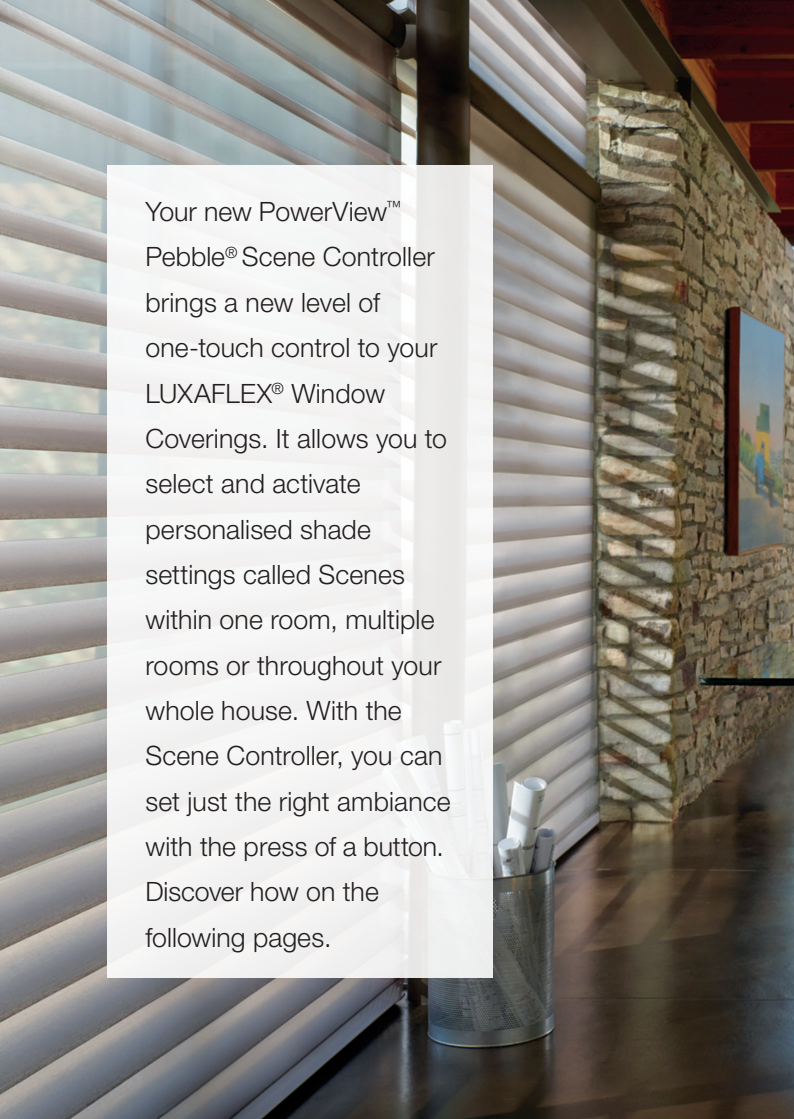


**Luxaflex**®  
WINDOW FASHIONS



Your new PowerView™  
Pebble® Scene Controller  
brings a new level of  
one-touch control to your  
LUXAFLEX® Window  
Coverings. It allows you to  
select and activate  
personalised shade  
settings called Scenes  
within one room, multiple  
rooms or throughout your  
whole house. With the  
Scene Controller, you can  
set just the right ambiance  
with the press of a button.  
Discover how on the  
following pages.

# Table of Contents

 Key Components.....	<b>3</b>
 Getting Started .....	<b>8</b>
 Programming and Operation .....	<b>11</b>
 Battery Replacement.....	<b>16</b>
 Troubleshooting .....	<b>20</b>



## Key Components

# POWerview™ PEBBLE® SCENE CONTROLLER

Ergonomically designed, the hand-held PowerView Pebble Scene Controller is available in seven on-trend colours to complement your home décor.

 


## POWerview SURFACE SCENE CONTROLLER


The sleek PowerView Surface Scene Controller is wall-mounted so it is always right where you left it.



# SCENE CONTROLLER MODULE FRONT

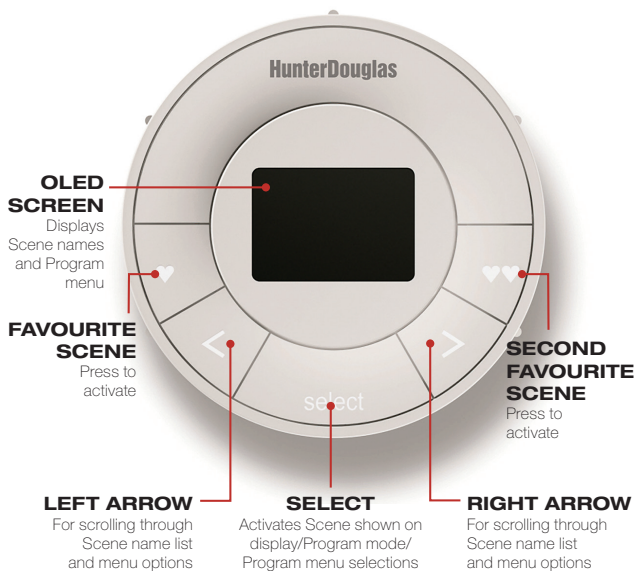

## SCENE CONTROLLER MODULE

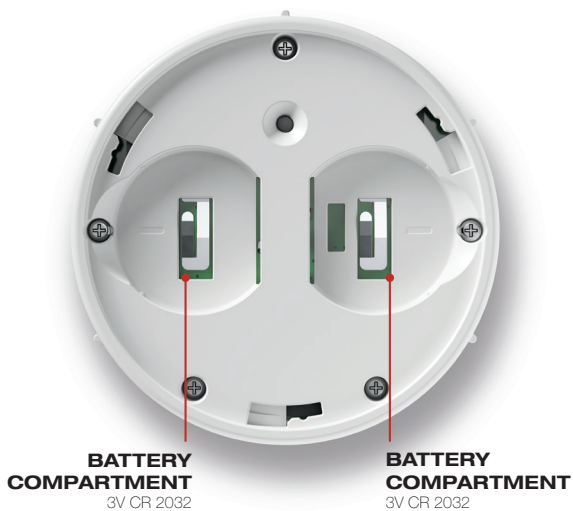 






## Getting Started

## Getting started

First, activate the Scene Controller by pulling both plastic tabs from the back battery compartment.

Inserting the Scene Controller module into the PowerView Pebble® (hand-held):

 - 1.** Centre the “select” button on the Scene Controller module above the indentation on the bottom rim of the Pebble.
- 2.** Align the ribs on the module with the grooves in the Pebble.
- 3.** Gently push the Scene Controller module into the Pebble until it is snug.

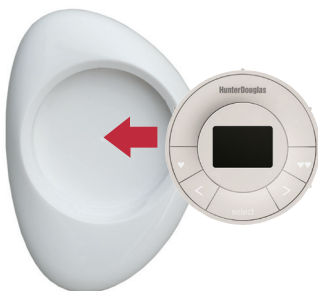


### Mounting the PowerView Surface:

- 1.** Choose a location to mount the Surface.
- 2.** Orient the Surface mounting plate so that the Hunter Douglas logo is horizontal and level. Mark screw holes.
- 3.** If you are mounting the Surface onto drywall, use a 5mm drill bit to drill pilot holes. Tap drywall anchors into the pilot holes until the flange of the anchor is flush with the drywall.
- 4.** If you are mounting the Surface onto wood, use a 3mm drill bit to drill the screw holes.
- 5.** Attach the Surface mounting plate using the screws provided.
- 6.** Align the Surface ring with its mounting plate and twist the Surface ring clockwise to lock it in place.

### Inserting the Scene Controller module in the Surface:

 - 1.** Align the ribs on the Scene Controller module with the grooves on the Surface.
- 2.** Gently push the module into the Surface until it is snug.



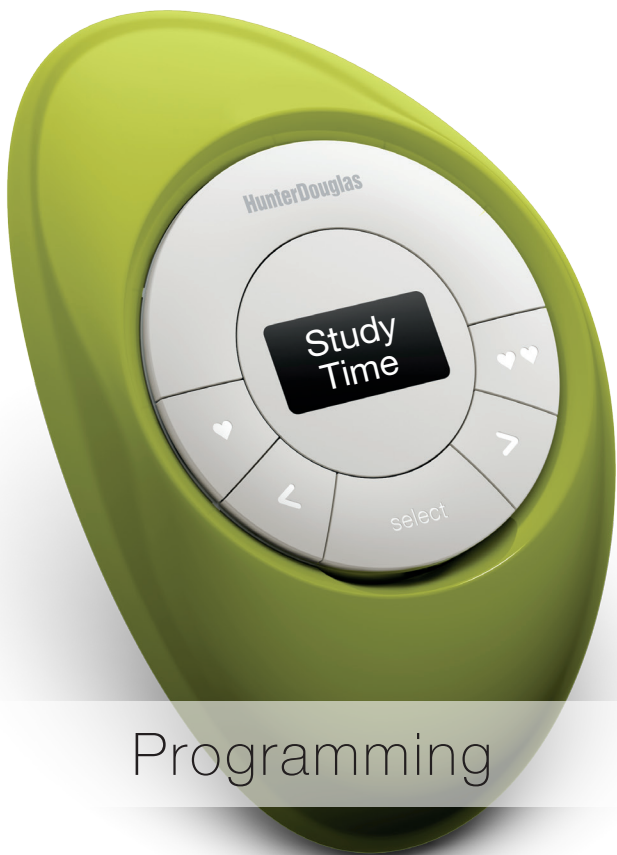

# Programming

## Configuring the Scene Controller

- 1.** Check to be sure your PowerView Hub is powered up, connected to a wireless router, and the light on the Hub is a solid blue.
- 2.** For INITIAL CONFIGURATION ONLY: press any button on the Scene Controller to activate controller. Screen should read: “Join Hub?”
- 3.** Open the PowerView App on your mobile device.
- 4.** Select the “Add New Controller” menu option in the PowerView App (under Hub Settings).
- 5.** Follow the instructions on the App screen to configure the Scene Controller.

The Scene Controller is now joined to the PowerView Hub. You may now use the PowerView App to configure which Scene names are displayed on the Scene Controller.

For additional Scene Controllers follow the instructions listed above.

Hub Settings		About This Hub	
Done			
About This Hub	>	Name	Sample
RemoteConnect	>	Firmware Version	0.6.441
Scene Controllers		Serial Number	B868C5F5A0B189A
Add New Controller		PowerView Network ID	0xFFFF
		IP Address	192.168.3.164
		MAC Address	00:26:74:1e:56:58

## Updating Scene Name List in the Scene Controller

1. Press and hold the “select” button for 4 seconds until the buttons begin to flash. This puts the Scene Controller into Program mode.
2. Use the arrow buttons (< and >) to navigate the programming menu options:
  - a. **“Update Scenes?”**—Scene Controller communicates with the PowerView Hub to get updated Scene name information.
  - b. **“Forget This Controller?”**—clears all programming from the Scene Controller.
  - c. **“Exit Menus?”**—exits programming mode.
3. Use the “select” button to activate a menu option.



## Basic Operation

- 1.** To wake the Scene Controller, press any button.  
The last scene activated is displayed on the screen.
- 2.** To activate one of your FAVOURITE Scenes, press ♥ or ♥♥. Use the App to configure FAVOURITE Scenes.
- 3.** To activate other Scenes, use the arrow buttons (< and >) to scroll through the Scene name list.
- 4.** Press “select” to activate the Scene displayed on the screen.

NOTE: The Scene name will flash until the command has been confirmed by the PowerView Hub.





# Battery Replacement

## Replacing batteries in the Scene Controller

Replacing the batteries in the Scene Controller will not cause the loss of any programming. The Scene Controller is powered by two CR 2032 batteries.

 
1. For the Pebble® Scene Controller, slide your thumb in the indentation, gently lift and remove the module from the Pebble. For the Surface Scene Controller, remove the Surface from its mounting plate by twisting the Surface counter-clockwise. Push the Scene Controller module out from the back of the Surface.



2. Rotate the back cover of the Scene Controller module clockwise to unlock.
3. Remove the back cover from the Scene Controller module.



4. Using a finger or small screwdriver, gently lift and remove the old batteries.

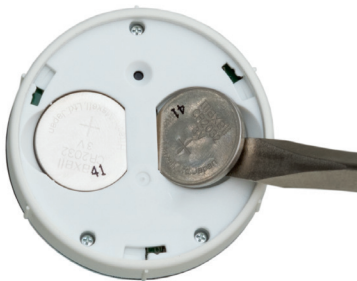

5. Insert new batteries, making sure each is snug.



6. Align and replace the back cover onto the backside of the Scene Controller module.
7. Rotate the back cover counter-clockwise to lock the back cover in place.
8. Align the ribs on the Scene Controller module with the grooves on the Pebble® or the Surface.
9. Gently push the module into the Pebble or the Surface until it is snug.





# Troubleshooting

## Troubleshooting

1. There is nothing on the screen and none of the backlit buttons illuminate on my Scene Controller when I press the buttons.
  - Check to make sure the batteries are inserted properly and are new.
2. The Scene name is blinking on the OLED screen after I pressed “select”.
  - This is normal behavior. The Scene name will stop blinking after the Hub has confirmed the Scene has been successfully activated.
3. I cannot get my Scene Controller to communicate with the Hub.
  - Make sure the batteries in the Scene Controller are fresh, and that the Hub has a solid blue light.
  - Move the Scene Controller closer to the Hub, or install additional repeaters, to improve wireless communication.
  - Select “Forget This Controller?” from the Scene Controller menu and re-configure (see Programming and Operation section).

**4.** Battery Life of Scene Controller Module is less than expected.

- When the Pebble® Scene Control is picked up, the Scene Controller Module's motion back lights are activated.

In situations where the remote control is under constant movement, the motion back lighting can activate more often than normal causing the batteries to deplete at a faster rate.

- It is possible to disable the motion back light function by pressing and holding the 6 channel button for 6 seconds.
- To re-enable motion back light press and hold the 6 channel button for 6 seconds.

---

Hunter Douglas Australia  
338 Victoria Rd Rydalmere, NSW, 2116, Australia  
PowerView has been certified as complying with ACMA'S regulatory requirements.



